



# 120/208 VAC 3 Phase Setup

The following setting needs to be made for an NV14 sent from the factory as 120/240VAC for it to work.

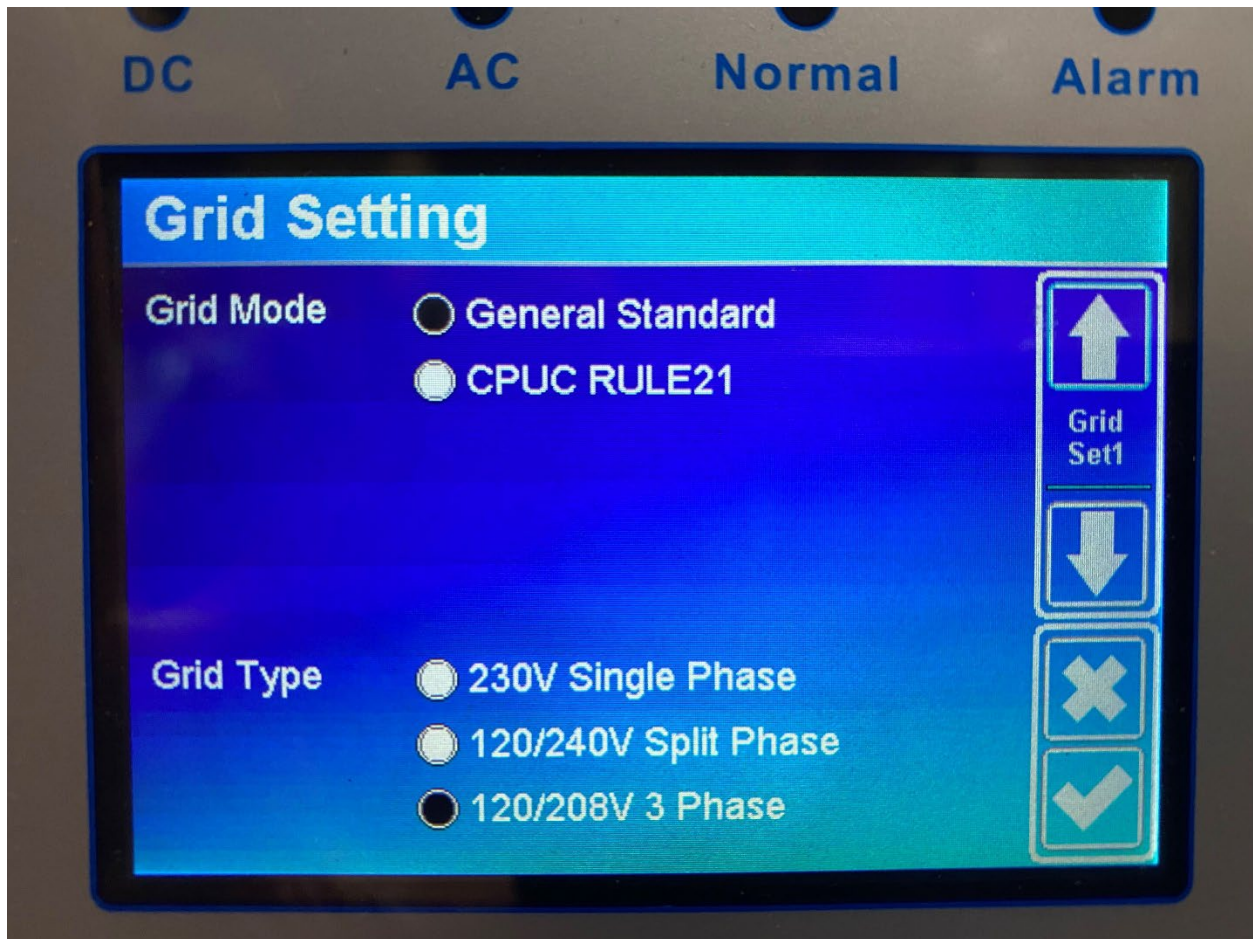

The NV14 will provide the F13 Alarm fault when the setting is changed, that is normal.

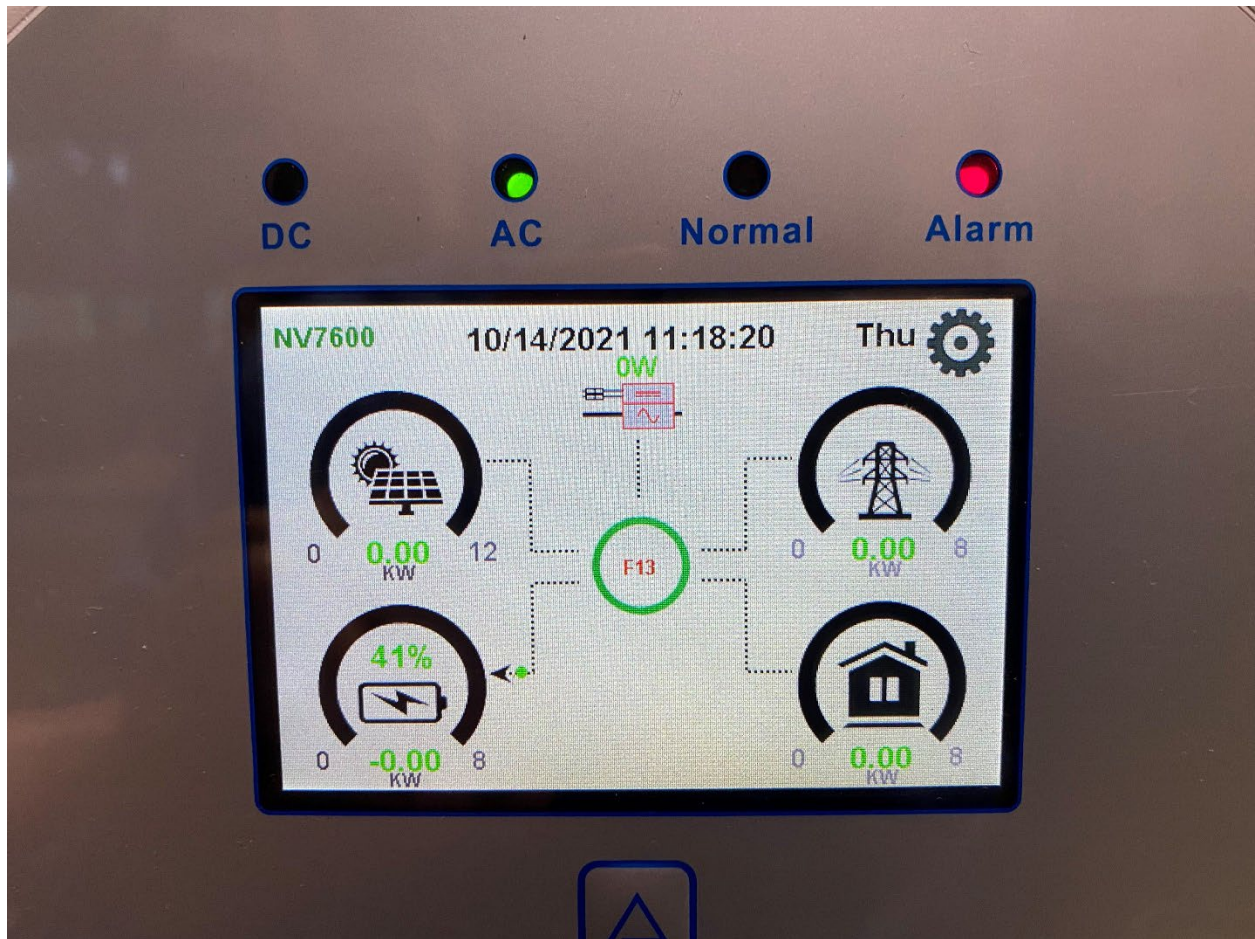

Power the NV14 down and then when you turn it on again, it will work as desired.